
Fireworks and Firecrackers Production Line-Granulation station




Granulation station

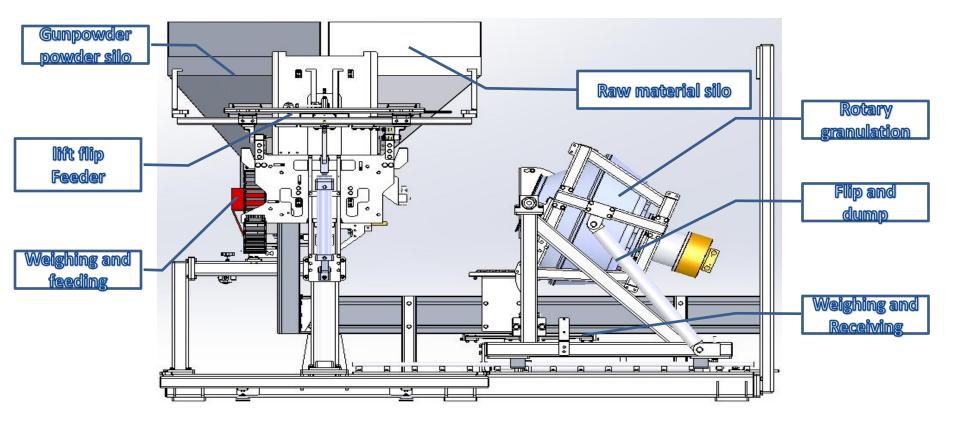

Single station function

Granulation station

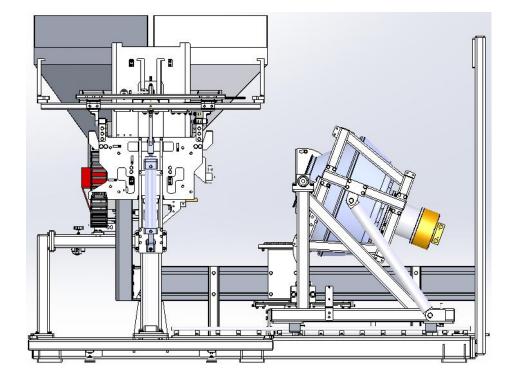

• Add the raw materials into the corresponding silos respectively.

The vibrating feeder quantitatively sprinkles the gunpowder powder into the granulation pot.
The granulation pot will rotate and shake the raw medicine granules and gunpowder in the pot into balls.

Spray the appropriate amount alcohol on the ball, and then add gunpowder powder to rotate.
Repeat the above actions in turn until the gunpowder in the rotating granulation pot forms bright beads.

•After the granulation is completed, the turning mechanism will turn action to pour the bright beads from the pot into the material box on the material receiving platform.

